

# Installation Instructions

## VOLKSWAGEN JETTA WAGON

Part Numbers:  
**60984**

Do Not Exceed Lower of Towing Vehicle

Manufacturer's Rating or

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>Not For Use With Spring Bars</b>	
Weight Carrying Ball Mount	<b>2,000 (908 Kg)</b>	<b>200 (90.8 Kg)</b>


**Equipment Required:**

**Fastener Kit:** F60984

**Wrenches:** 3/4", 11/16", 5/8"

**Drill Bits:** 1/2"

Wiring Access Location: PC3, PC4

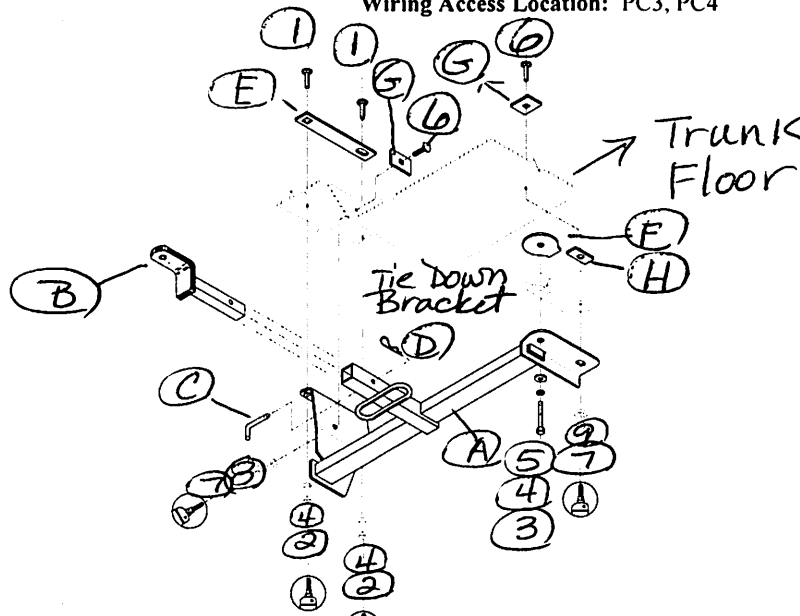

①	Qty. (2)	Carriage bolt 7/16-14 x 1-1/2" GR5	⑥	Qty. (2)	Carriage bolt 1/2-13 x 1-3/4" GR5
②	Qty. (2)	Hex nut 7/16"	⑦	Qty. (2)	Hex nut 1/2"
③	Qty. (1)	Hex bolt 7/16-14 x 1-1/2" GR5	⑧	Qty. (1)	Lock washer 1/2"
④	Qty. (3)	Lock washer 7/16"	⑨	Qty. (1)	Conical washer 1/2"
⑤	Qty. (1)	Flat washer 7/16"			
A	Qty. (1)	Hitch assembly	E	Qty. (1)	Reinforcing plate 1 x 6"
B	Qty. (1)	Drawbar	F	Qty. (1)	Nut plate
C	Qty. (1)	Pull pin	G	Qty. (2)	Reinforcing plate 1-1/2 x 2-1/2"
D	Qty. (1)	Pin clip	H	Qty. (1)	Spacer 1 x 2"

**INSTRUCTIONS:**

1. Remove plastic storage tray from trunk.
2. Insert nut plate (F) into vehicle's tie down bracket small end first with weld nuts upward.
3. Hold hitch in position and install rearmost hex bolt (3) in passenger side bracket as shown in illustration. Tighten bolt snug to hold hitch in position.
4. Adjust hitch aligning it with rear of vehicle.
5. Using the three holes in driver side bracket as a drill guide, drill three 1/2" diameter holes through trunk floor and tire well.
6. Place reinforcing plates (E & G) inside trunk, install carriage bolts and hardware. Refer to illustration.
7. Remove nut plate (F).
8. Using forward hole in passenger side bracket as a drill guide, drill a 1/2" diameter hole through the tie down bracket.
9. Reinstall nut plate and remaining hardware.
10. Tighten 7/16" bolts to 54ft.lbs and 1/2" bolts to 72ft.lbs
11. Place drawbar (B) into hitch assembly (A) and insert pull pin (C) into end of drawbar (B). Use pin clip (D) to hold pull pin (C) in place.

Tighten all 7/16-14 GR5 fasteners with torque wrench to 36 Lb.-Ft. (49 N\*M)

Tighten all 1/2-13 GR5 fasteners with torque wrench to 75 Lb.-Ft. (102 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.